



User's Manual FP-2703W


Panel Protector for EIZO 68 cm (27.0 inch) class LCD Monitors

Note

- Please be careful not to scratch the LCD panel or the cabinet with the panel protector during installation. Also please do not remove the panel protector often. It may scratch or result in damage to the LCD panel.
- The panel protector has an anti-glare treatment side and a glossy side. Use preferable side.
- When using LCD monitor with optional panel protector, it is preferable to avoid using downwards. In this condition, the panel protector might become bend or slip out from the monitor.
- Attaching a panel protector to the monitor with an Integrated Front Sensor (slide type) disables an Integrated Front Sensor (slide type). The settings for the monitor and RadiCS/RadiCS LE need to be changed. Refer to each User's Manual for details.

Installation

Before installation, please remove dust and stains from the LCD panel.

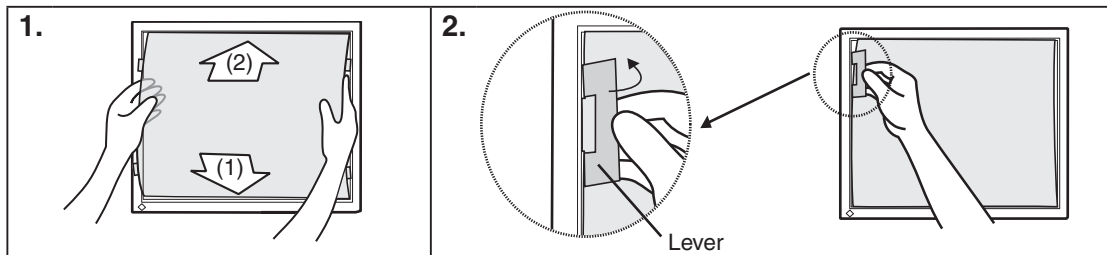

1. Set the panel protector into the grooves of the panel frame; the lower first (1), then the upper (2).


2. With the enclosed tool (Lever) set the tabs of the panel protector into the side grooves (6 tabs).

Put the lever on the tabs of the panel protector and move it toward the LCD panel to install. Position the protector into the LCD panel tightly without leaving an opening.

For the recommendation, please use the stoppers to prevent the panel protector from bending or slipping out from the monitor. 2 types of stoppers are included. Check "Applicable Models" printed on the bag of the stoppers to use the appropriate type depending on the monitor.

Before installation the stoppers, please remove dust and stains from the cabinet of the monitor. Follow these steps to install the stoppers.

1. Remove the protection paper from the stoppers.
2. Install the stoppers on the cabinet of the monitor.

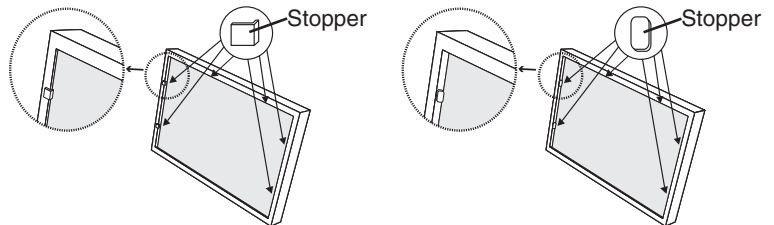

Removing

Release the stoppers from the cabinet. Put the lever on the tabs of panel protector and move it toward the cabinet to remove.

Cleaning

Note

- Please be sure to keep the panel protector immobilized while cleaning it. Otherwise it may scratch the surface of the LCD panel. To hold the panel protector by hand, use a soft cloth to avoid dust or finger prints.
- Chemicals such as alcohol and antiseptic solution may cause gloss variation, tarnishing, and fading of the cabinet or panel, and also quality deterioration of the image.
- Never use any solvents or chemicals, such as thinner, benzene, wax, and abrasive cleaner, which may damage the cabinet or panel.

If necessary, the stains on the cabinet and panel surface can be removed by moistening part of a soft cloth with water.

Tips

- The optional ScreenCleaner is recommended for cleaning the cabinet and panel surface.

Specification

Surface treatment	Anti-glare side: anti-glare hard coating / Glossy side: hard coating		
Coating strength	2H		
Reflectivity	Less than 6.8 %	Light transmission	More than 90 %
Dimension/ Weight	601.0 mm (W) × 340.1 mm (H) × 1.0 mm (D) / approx. 245 g		
Accessories	Lever (for Panel Protector) x 1, Stoppers 2 types x 6, User's Manual		



EIZO Corporation

153 Shimokashiwano, Hakusan, Ishikawa 924-8566 Japan
Phone: +81 76 277 6792 Fax: +81 76 277 6793

EIZO Europe GmbH

Helmut-Grashoff-Strasse 18, 41179 Mönchengladbach, Germany
Phone: +49 2161 8210210 Fax: +49 2161 8210150

EIZO株式会社

〒 924-8566 石川県白山市下柏野町 153 番地

<http://www.eizoglobal.com>
<http://www.eizo.co.jp>

Copyright © 2012-2015 EIZO Corporation All rights reserved.

3rd Edition-November, 2015 Printed in Japan.

00N0L768C1
(U.M-FP-2703W-AL)